



PVAF-R Series

Arc Fault Detection for Solar Applications

INTRODUCTION

In the course of normal operation, high voltage PV systems experience severe environments, thermal expansion, and potentially lingering issues from improper installation. These items contribute to the possibility of a fire due to arcing events. To mitigate this, article 690.11 of the 2011 and 2014 NEC mandates listed arc fault protection on all PV systems with a maximum voltage of 80VDC or more operating on buildings.

Sensata's PVAF-R arc fault detector is an integrated arc detection solution which is appropriate for NEC 2011 and 2014 compliant equipment. By building on Sensata's experience in aerospace arc fault technology, Sensata has developed one of the first UL 1699B recognized arc fault detectors for the solar PV industry. Sensata's PVAF-R arc fault detection solutions offer this capability at an economical price point.

Sensata's PVAF-R includes an on-board CT for each monitored string in a solar array. Up to four individual PV strings can be monitored concurrently on one PVAF-R rectangular board, and multiple boards can be nested for larger string quantities. If an arc is found, a signal is sent via an open collector transistor to the string control circuitry of the combiner box or inverter. The on board LED provides a quick visual indication of which strings the PVAF-R has detected an arc on.

FEATURES

- Monitor up to four strings (20A max, 1000V max) per PVAF-R arc fault detector
- Self test feature provides verification of unit functionality
- Wiring pitch of 17.8mm matches that of most commonly used electrical buses
- CT's mounted at right angle to PCB, enabling convenient wiring
- Compact size and nesting geometry simplifies system integration
- Conformal coated PCB protects from environmental contaminants
- Single interface connection eases harness management
- On Board LED provides quick visual indication of power ON/OFF and any detected arcing
- Open-collector output can remotely trip breaker or contactor
- Designed for use on systems without DC optimizers
- UL1699B (type 1) recognition

ADVANTAGES

- Proprietary algorithm minimizes nuisance trips on most system topographies, reducing downtime and costly manual intervention
- Applicable to products for new installations and retrofits
- Tested with a variety of string and central inverters
- PVAF's UL recognition does not require additional arc testing during UL listing

SPECIFICATIONS

Required External Power Supply	12VDC nominal, 11.4VDC to 15.75VDC range, 30 mA max; 24VDC nominal, 21.6VDC to 26.4VDC range, 30mA max
Number of CT's per PVAF board	Up to 4 CT's (20A max)
CT Amperage Rating	Up to 20A max per CT with single lines
Max Line Voltage	1000VDC
Insulation	> 3000VDC
Compliance & Approvals	UL1699B (Type 1) & UL1998 recognized, RoHS compliant (lead-free)
Storage & Operating Temperature	-40°C to 85°C (-40°F to 185°F)
Mounting	PC board holes for customer-supplied standoffs
Mass	70 grams (2.5 oz)




SELF TEST FEATURE

As required by UL, a self test feature is provided on every unit. The self test interface (PIN 4) provides the user the ability to send an electrical signal to the PVA-F-R to simulate an arc fault condition in the system. The PVA-F-R will perform a self test when the signal is low (short) for a minimum of 10ms. Note: a latching reset is required to restore the PVA-F-R and the system to proper working function.

OPEN COLLECTOR OUTPUT

The PVA-F-R provides a signal to the user indicating that there is an arc fault condition present. During normal operating conditions, this signal is low (short). When an arc fault is detected or an AFD fault is registered, this signal changes to high (open).





VISUAL INDICATOR (GREEN LED)

	A blinking green light means system is working properly to detect arc fault.
	A solid green light means an arc fault has been detected and the system needs attention.
	No light means there is an issue with the power reaching the PVA-F-R from the external power supply

LATCHING RESET

When the PVA-F-R detects an arc fault, the unit is latched in the arc fault state. Once the arc fault situation has been resolved, the PVA-F-R needs to have the latching function reset. This is accomplished by cycling the external power supply OFF and ON again. Turning the power OFF and ON resets the PVA-F-R to its normal arc fault monitoring functionality.

CONNECTOR TERMINATIONS (PINS)


	Pin 4 - Self test IN (reference to ground)
	Pin 3 - Arcing detect OUT (reference to ground)
	Pin 2 - Ground
	Pin 1 - Power (+12VDC; +24VDC)

UL1699B TYPE 1 RECOGNITION



As described in UL1699B Edition 2 (2013), there are two types of UL 1699B recognition: Type 1 and Type 2. UL 1699B Type 1 recognition requires that the arc fault detector (AFD) detect a class of series faults. It also allows that the AFD may detect a class of parallel faults. UL 1699B Type 2 recognition requires detection of both a class of series and a class of parallel faults. Neither Type 1 nor Type 2 recognized AFD's are required to distinguish between parallel or series faults. UL 1699B only requires that the AFD detect an arc of 300 W or more in conditions defined in the standard.

Sensata's PVA-F-R has UL 1699B Type 1 recognition only. As such, it detects a class of series faults. The PVA-F-R also detects a class of parallel faults, but it does not distinguish whether a specific fault is a series or parallel fault. System designers using the PVA-F-R should incorporate appropriate system responses for both series and parallel faults in their designs. System designers should also read the UL 1699B standard to fully understand the differences and capabilities of Type 1 and Type 2 AFD's before designing an arc fault interruption system including any UL 1699B recognized AFD.


BLOCK DIAGRAM

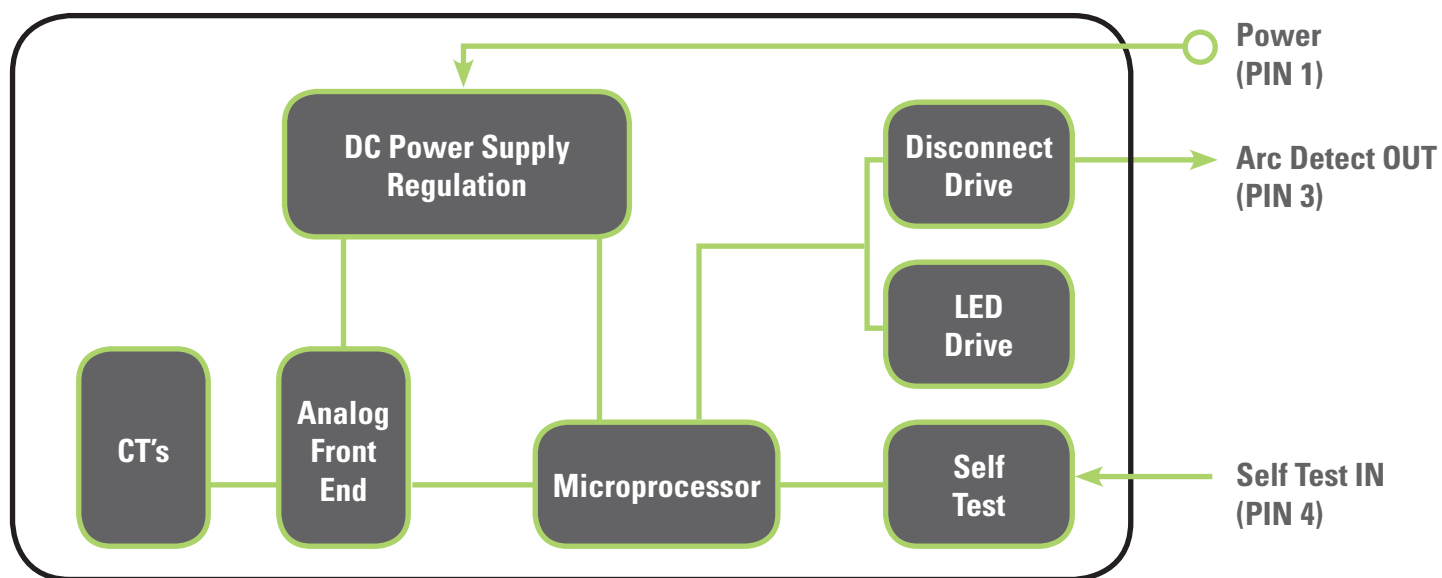

DIMENSIONAL DRAWINGS (4CT, 20A max shown)

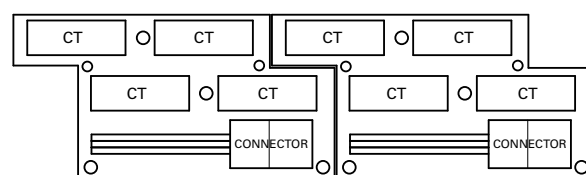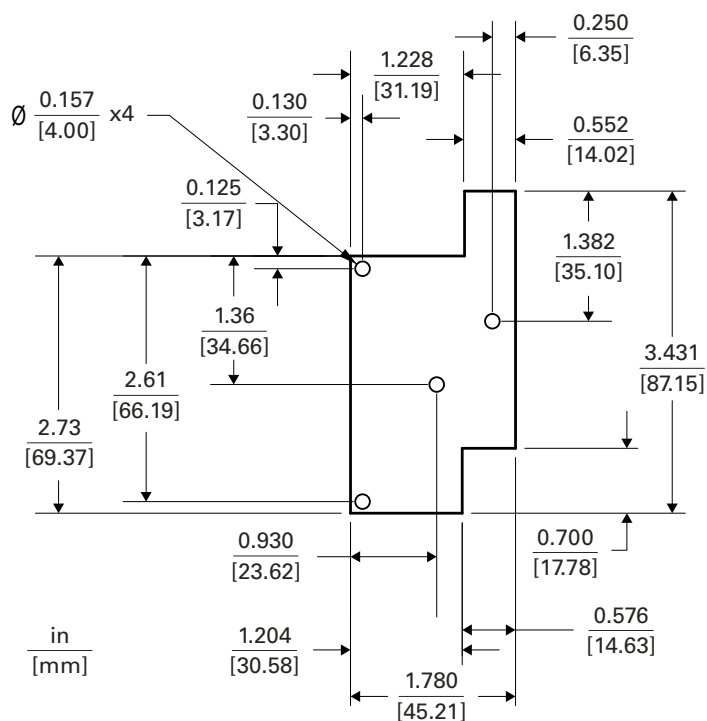


Example of two sets of 4CT configuration PVAF series mounted side-by-side

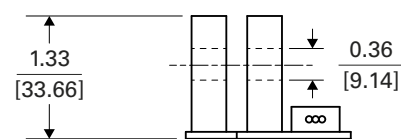

Recommend a minimum of 0.25" (6.35mm) tall standoffs be used when mounting to a surface

PART NUMBERING SCHEME

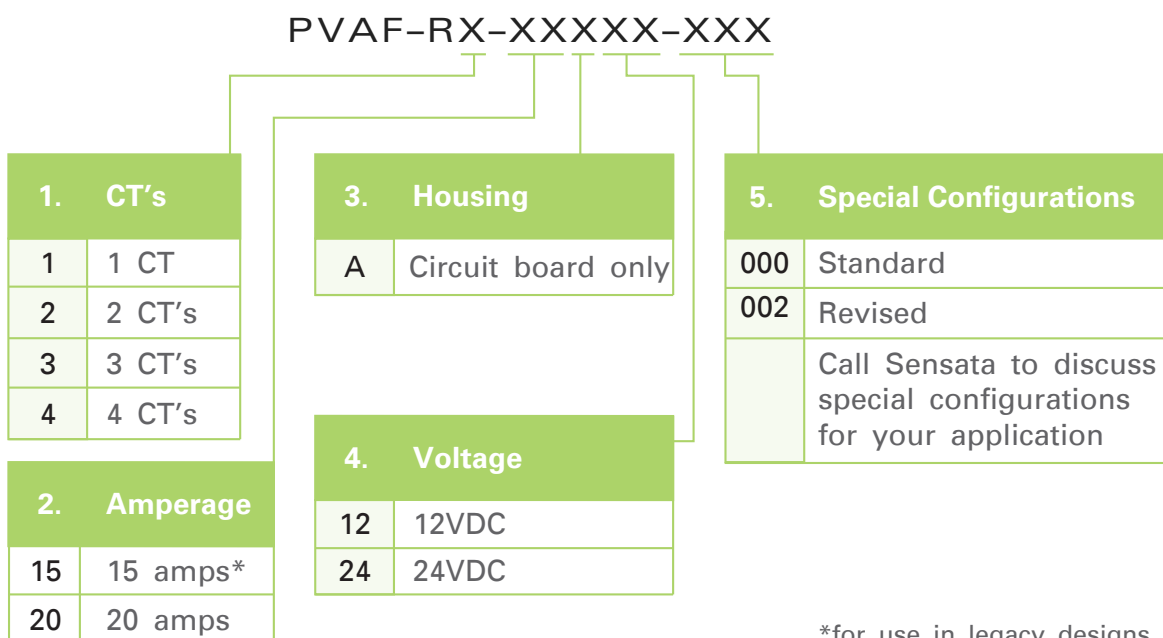

*for use in legacy designs only

www.sensata.com/uses/solar.htm

To find your local Sensata Representative contact us at +1 508-236-3287 or solar@sensata.com



The World Depends on Sensors and Controls

©2015 Sensata Technologies, Inc. All rights reserved worldwide. Printed in USA, revised January 2015

Important Notice: Sensata Technologies reserves the right to make changes to, or to discontinue, any product or service identified in this publication without notice. Before placing orders, users should obtain the latest version of the relevant information to verify that the information being relied upon is current.

Sensata Technologies assumes no responsibility for customers' product designs or applications. Users must determine the suitability of the Sensata device described in this publication for their application, including the level of reliability required. Many factors beyond Sensata's control can affect the use and performance of a Sensata product in a particular application, including the conditions under which the product is used and the time and environmental conditions in which the product is expected to perform. As these factors are uniquely within the user's knowledge and control, it is essential that the user evaluate the Sensata product to determine whether it is fit for a particular purpose and suitable for the user's application.

Sensata Technologies products are sold subject to Sensata's Terms and Conditions of Sale which can be found at: www.sensata.com/terms.htm